

B808 II

STYLISH & UNIVERSAL

FRAME
★ EXCELLENCE



Size S



Ref. B808BS



Ref. B808RS

Size L



Ref. B808BL



Ref. B808RL



Non-slip temples



Non-slip bridge



S : 20 g
L : 20 g



SUPPLIED WITH

Hard case,
microfibre cloth



FRAME

• PC

LENS MATERIAL AVAILABLE

• CR39
• Polycarbonate

+ VENTILATED SIDE SHIELDS

+ 2 SIZES - 2 COLOURS

+ PC FRAME

+ COMFORTABLE, NON-SLIP TIPGRIP TEMPLES

+ NON SLIP BRIDGE

bolle
SAFETY

B808 II

STYLISH & UNIVERSAL

MODEL	VERSIONS	REF.	SIZE	LENS HEIGHT	FRAME MARKING	LENS MARKING	TEMPLE LENGTH
B808 	Small - S	B808RS	49/18	33 mm		 	130 mm
	Large - L	B808RL	54/17	34 mm			135 mm
B808  Gunmetal	Small - S	B808BS	49/18	33 mm			130 mm
	Large - L	B808BL	54/17	34 mm			135 mm

LENS MARKING

Polycarbonate lens:

F. Low energy impact, resists a 6 mm, 0.86 g ball at 45 m/s
Maximum protection for glasses.

CR39 lens:

S. Extra strong, resists a 22 mm 43 g ball falling 1.30 m at 5,1 m/s.

FRAME MARKING

EN 166 : guaranteed minimum resistance of the protective eyewear against everyday risks including dropping the protective eyewear onto the ground, ageing by light exposure, exposure to heat or corrosion etc.

F. Low energy impact, resists a 6 mm, 0.86 g ball at 45 m/s
Maximum protection for glasses.

 European standard  Manufacturer name

Bollé safety product approval certificates to CE standards will be sent on request.

STANDARD ASSEMBLY RESTRICTIONS:

Maximum sphere power +10/-10

Maximum cylinder compared with sphere : +/-6.

CORRECTED BASE:

Corrected base : 4

CLEANING AND STORAGE

CLEANING : The lenses should be cleaned regularly. Bollé Safety recommends only using the B-clean lens cleaning system.

MAINTENANCE : Pitted, scratched or damaged lenses must be replaced by replacing the complete product. If the frame is damaged also replace the complete product. After each use it is recommended to keep the spectacles or goggles in a microfiber pouch or rigid case.

STORAGE : All products must be stored in a dry and clean environment.

PACKAGING AND EAN13 CODE

	B808RS	B808RL	B808BS	B808BL
Per piece	3660740006587	3660740006570	3660740006563	3660740006556

CHARACTERISTICS

LENS MATERIALS	CR39, Polycarbonate
TYPES OF CORRECTIONS AVAILABLE	Single vision - Bifocal - Progressive - degressive
FRAME MATERIAL	PC / Gunmetal or Red
STRAP	Non applicable
FOAM	Non applicable



Europe Bollé Safety
34 rue de la soie
69100 Villeurbanne - France
Tél. : 00 33 (0) 4 78 85 23 64
Fax : 00 33 (0) 4 78 85 28 56
contact@bolle-safety.com

bolle-safety.com

U.K. Bollé Safety
Unit C83 - Barwell Business Park Leatherhead Road - Chessington
Surrey - KT9 2NY
Tél. : 00 44 (0)208 391 4700
Fax : 00 44 (0)208 391 4733
e-mail : uk@bollebrands.com

26/02/2019

bolle
SAFETY


B808 II

STYLISH & UNIVERSAL

Assembly notice for B808 prescription spectacles


//1

Open the frame

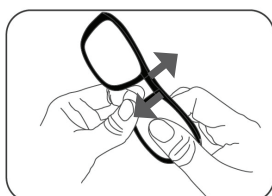


//2

Remove the
demo lenses

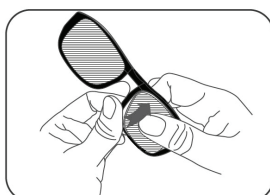


//3

Insert the
prescription lenses

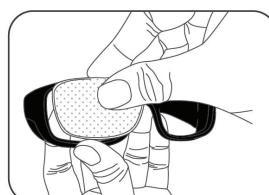



//4

Close the frame

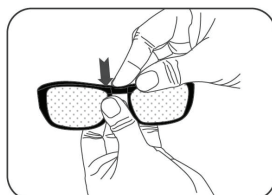


//5

Insert the **B-Flex** nose
piece and clip it up

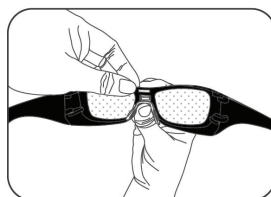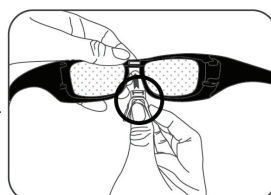

//6

The B808
is ready to wear!*

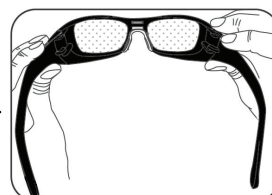

*The frame cannot be
opened again



Europe Bollé Safety
95 rue Louis Guérin
69100 Villeurbanne - France
Tél. : 00 33 (0) 4 78 85 23 64
Fax : 00 33 (0) 4 78 85 28 56
contact@bolle-safety.com

bolle-safety.com

U.K. Bollé Safety
Unit C83 - Barwell Business Park Leatherhead Road - Chessington
Surrey - KT9 2NY
Tél. : 00 44 (0)208 391 4700
Fax : 00 44 (0)208 391 4733
e-mail : uk@bollebrands.com

bolle
SAFETY

Supplied unassembled // assembly reserved for the laboratory

26/02/2019